

Function Output	Function Key
Peak signal	F0
Smoke Unit	F1
Steam Locomotive Driving Sounds	F2
Locomotive whistle	F3
Direct control	F4
Brake squeal off	F5
Light function	F6
Firebox flickering	F7
Peak signal	F8
Light function	F9
Light function	F10
Cab lighting	F11
Shunting whistle	F12
Shunting gear	F13
Interior lighting aisle	F14
Let off some steam	F15
Coal shovel & firebox	F16
Water pump	F17
Injector	F18
To refill water	F19
Refill coal	F20
Refill sand	F21
Air pump	F22
Generator noise	F23
Station announcement	F24
Station announcement	F25
Train announcement	F26
Announcement: History of the locomotive	F27
Announcement: History of the locomotive	F28
Cab talk	F29
Close the door	F30

**\*Please Note that the F2 key on our Gaugemaster Prodigy System is a "Non-Latched" button**

**On Control Systems like the Z21, Marklin/Trix Mobile Stations and Central Stations this can be changed to a "Latched" button**

**Further information can be found in the instruction booklet in the box.**